


Free play adjustment is made with the grip play adjuster (2).

To adjust free play, loosen the lock nut (3) and turn the adjuster.

Tighten the lock nut after adjustment.

Check again for smooth rotation of the throttle grip from the fully closed to the fully open positions in all steering positions.

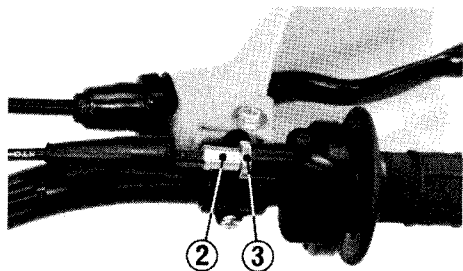

(1) Grip play adjuster (2) Lock nut