

REMOVAL FROM STORAGE

1. Uncover and clean the motorcycle. Change the engine oil if more than 4 months have passed since the start of storage.
2. Fill the fuel tank with fresh petrol.
3. Perform all Pre-ride Inspection checks (page 30). Test ride the motorcycle at low speeds in a safe riding area away from traffic.