

ITEMS	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL				Refer to page
			x100km	1.5	10	20	30	40	
			x100mi	1	6	12	18	24	
		NOTE 2	MONTH	1	6	12	18	24	
	BRAKE FLUID			I	I	I	I	I	24,26
	BRAKE PAD WEAR			I	I	I	I	I	79
	BRAKE SYSTEM			I	I	I	I	I	24-26
	BRAKE LIGHT SWITCH				I			I	88
*	HEADLIGHT AIM				I			I	-
	CLUTCH SYSTEM			I	I	I	I	I	27-28
	SIDE STAND				I			I	87
*	SUSPENSION				I			I	84,85
*	SPARK ARRESTER				C: every 1,600 km (1,000 mi) or every 100 operating hours				72
*	NUTS, BOLTS, FASTENERS			I		I		I	-
**	WHEEL/TIRES			I	I	I	I	I	35, 86
**	STEERING HEAD BEARINGS			I		I		I	-

- * SHOULD BE SERVICED BY YOUR HONDA DEALER, UNLESS THE OWNER HAS THE PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR HONDA DEALER.

NOTE: 1. Service more frequently when ridden in wet or dusty conditions.
2. Replace every 2 years. Replacement requires mechanical skill.