

# SWITCHES

## Ignition Switch

The Ignition Switch turns the Ignition "ON" and "OFF".

Do not attempt to turn or remove the key while riding.

In the "OFF" or "LOCK" positions the engine will stop.

Always stop the motorcycle before attempting to turn the key.

Position	Function	Key
ON	Engine Start/Riding - Headlight is "ON"  - Horn, Indicators and Stop Lamp will operate.	Can't be Removed.
OFF	Engine Stop. All electrics "OFF"	Can be
LOCK	Steering Locked All electrics "OFF"	Removed.

### **ADVICE**

- The headlight will come on as soon as the Ignition is switched on. Do not leave the switch on or the battery will go flat.

### **NOTE**

- Always lock and remove key when parking the m/cycle.

