


## Starting the Engine

---

### Engine start procedure

When engine is cold:

1. Release the Steering lock.
2. Set the engine stop switch to RUN position.
3. Turn the Fuel Tap valve to the ON position.
4. Turn the ignition switch ON.
5. Ensure that the Neutral Indication lamp is ON.
6. Pull out the choke lever fully.
7. Engage the Starter – Do Not Touch the Throttle.
8. Once the engine starts, warm up until smooth running is achieved. Fully push the choke lever in.
9. Make sure that the side stand is retracted prior to starting the engine or riding away.

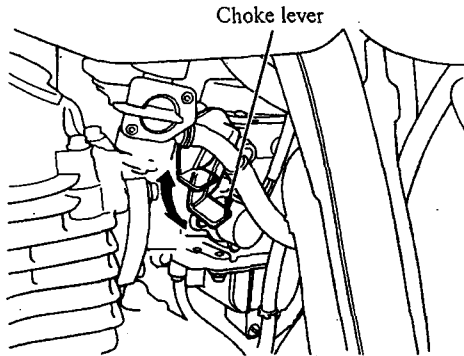

- If the engine does not start, refer to pg. 95 for troubleshooting.