
Clutch

Clutch lever free play

Pull the clutch lever until you feel resistance. The clutch lever free play at its end should be within the following range:

Clutch lever free play: 10 - 20mm

Please adjust the lever free play if necessary (see the next page for details).

