
Fuses in the fuse box

1. Remove left side cover
2. Remove fuse box cover by releasing its catch.
3. Locate the blown fuse. There are some spare fuses in the box.
4. Re-install fuse box cover and left side cover.

Main fuse

1. Remove left side cover.
2. Disconnect starter magnetic switch coupler.
3. Pull out the main fuse to check it. A spare fuse is stored underneath the starter magnetic switch.
4. Reconnect the coupler and install the side cover.

