

03/05/20 10:06:54 31KCY680_080

Engine Oil

10. Remove the oil filter (5) from the cover.

(5) oil filter
 (6) O-ring
 (7) spring
 (8) rubber seal
 (9) OUT-SIDE mark

11. Discard the oil filter in an approved manner (page 145).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

12. Check that the oil filter cover O-ring (6) is in good condition.

13. Position the spring (7) against the engine crankcase and install a new oil filter with the rubber seal (8) facing out, away from the engine. You should see the “OUT-SIDE” mark (9) on the filter body, near the seal.

NOTICE

Improper installation of the oil filter can cause serious engine damage.

14. Reinstall the oil filter cover, making sure the bolts are tightened securely to the specified torque.

Oil filter bolt:
9 lbf·ft (12 N·m , 1.2 kgf·m)

(cont'd)

71 Servicing Your Honda