




Air Cleaner

Cleaning

LEFT SIDE

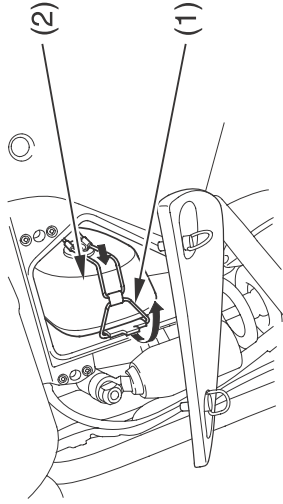

(1) set spring
(2) air cleaner

1. Remove the air cleaner housing cover (page 59).
2. Unhook the set spring (1).
3. Remove the air cleaner assembly (2).
4. Remove the air cleaner from its support.
Wipe the support clean.

5. Gently wash the air cleaner in clean, non-flammable (high flash point) solvent such as kerosene — not gasoline. After cleaning, gently squeeze out the remaining solvent. Avoid twisting or wringing the air cleaner. This can tear the foam.
6. Inspect for tears or cracks in the foam or seams of the air cleaner. Replace the air cleaner if it is damaged.
7. Allow the air cleaner to dry thoroughly before applying oil. A wet air cleaner will not fully absorb the oil.

