




Clutch System

Refer to *Safety Precautions* on page 45.

Clutch Freeplay

LEFT SIDE

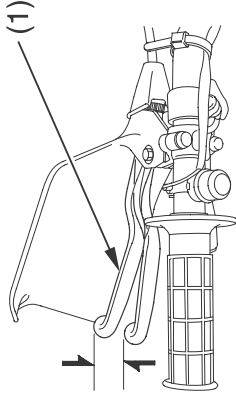

(1) clutch lever

Inspection

Check freeplay.

Freeplay: 3/8 – 13/16 in (10 – 20 mm)

If necessary, adjust to the specified range.


Improper freeplay adjustment can cause premature clutch wear.

80 Servicing Your Honda



Upper Adjustment
Minor adjustments are generally made with the upper clutch cable adjuster.

LEFT SIDE

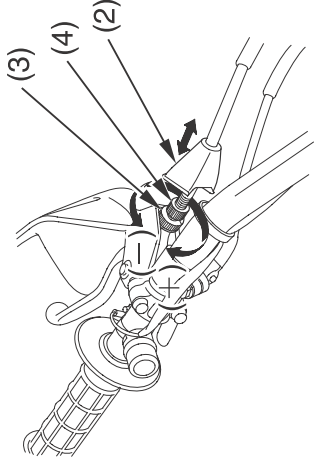

(2) dust cover (+) increase freeplay
(3) upper lock nut (-) decrease freeplay
(4) upper clutch cable adjuster

1. Pull the rubber dust cover (2) back.
2. Loosen the upper lock nut (3).
3. Turn the upper clutch cable adjuster (4) to obtain the specified freeplay.

