

Suspension


Rear Suspension Spring Pre-Load

Pre-load should be adjusted when the engine is cold because it is necessary to remove the muffler.

An optional pin spanner is available for turning the lock nut and adjusting nut to adjust spring pre-load.

1. Remove the seat (page 60).
2. Remove the right side cover (page 58).
3. Remove the muffler by loosening the muffler clamp bolt (2) and removing the lower (3) and upper muffler bolts (4). Pull the muffler away from the exhaust pipe.

RIGHT SIDE

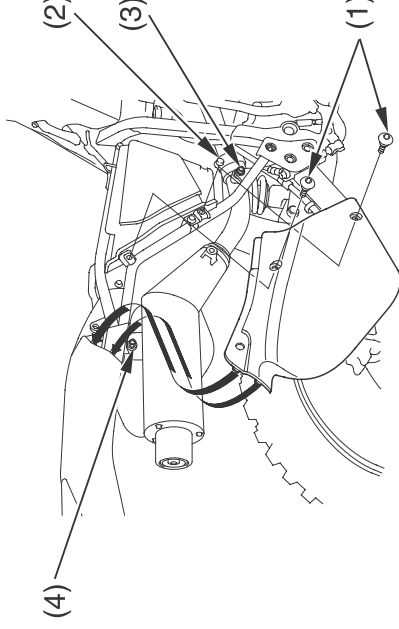

- (1) side cover bolts
- (2) muffler clamp bolt
- (3) muffler bolt (lower)
- (4) muffler bolt (upper)