




Suspension

11. To increase spring pre-load:
 Loosen the lock nut (2) with the optional pin spanner and turn the adjusting nut (3) to shorten the spring length. Do not shorten to less than:
8.08 in (205.3 mm)

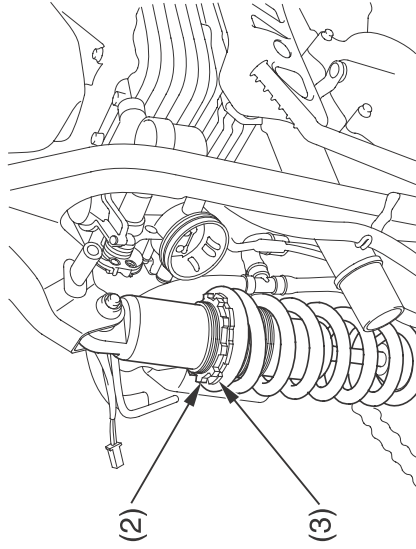

(2) lock nut
 (3) adjusting nut



To decrease spring pre-load:
 Loosen the lock nut (2) with the optional pin spanner and turn the adjusting nut (3) to increase the spring length. Do not increase to more than:
8.56 in (217.3 mm)

Each turn of the adjuster changes spring length and spring pre-load. One turn equals:
 spring length/spring pre-load:
0.06 in (1.5 mm) / 33.1 lbs (15.0 kg)



12. Tighten the lock nut and install the removed parts.

(cont'd)

