


Suspension

Compression Damping

The compression damping adjuster has at least 14 positions. Turning the adjuster one full turn advances the adjuster 6 positions.

To adjust to the standard position:

LEFT
SIDE

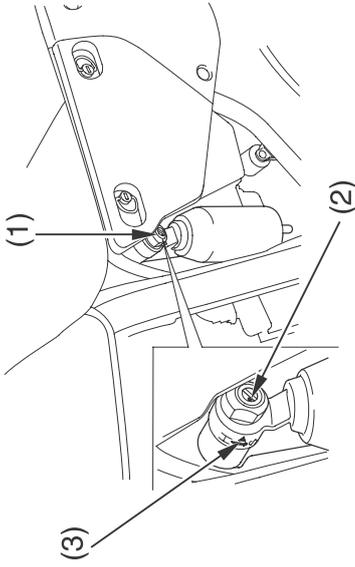

- (1) compression damping adjuster
- (2) punch mark
- (3) reference mark

1. Turn the adjuster (1) counterclockwise until it will no longer turn (lightly seats). This is the full soft position.
2. Turn the adjuster clockwise 12 clicks until the punch mark (2) on the adjuster aligns with the reference mark (3).

