

## Brakes

Refer to *Safety Precautions* on page 45.


Both the front and rear brakes are the hydraulic disc type. As the brake pads wear, the brake fluid level will drop. A leak in the system will also cause the level to drop.

Frequently inspect the system to ensure there are no fluid leaks. Periodically inspect the brake fluid level and the brake pads for wear.

If the front brake lever or rear brake pedal freeplay does not feel within the normal range while riding, check the brake pads. If they are not worn beyond the recommended limit (page 110 ), there is probably air in the brake system. See your Honda dealer to have the air bled from the system.

### Front Brake Lever Adjustment

RIGHT SIDE

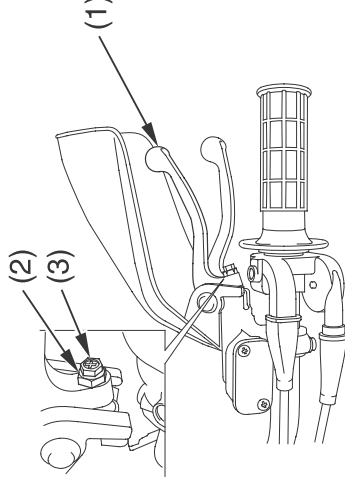

- (1) front brake lever
- (2) lock nut
- (3) adjuster

Never use adjusters other than those designed for this motorcycle. Install a new adjuster from the lever side with the lock nut under the head of the adjuster.

(cont'd)

Servicing Your Honda 107