



Wheels

Removal

1. Raise the rear wheel off the ground by placing a maintenance stand or support block under the engine. Secure the front of the motorcycle with tie-down straps.
2. Remove the brake hose guide.
3. Loosen the rear axle nut (1) while holding the axle.
4. Turn both adjusters (2) so the rear wheel can be moved all the way forward for maximum drive chain slack.
5. Move the rear wheel forward. Deraill the drive chain from the driven sprocket.
6. Move the rear axle (3) back all the way to the swingarm end. Pull down on the rear axle.



7. Remove the rear wheel with the rear axle. Avoid depressing the brake lever and brake pedal when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.

