


Drive Chain

1. Hold the axle (1) and loosen the rear axle nut (2).
2. Turn both the right and left adjusters (3) equally to increase or decrease chain slack.
3. After adjusting, be sure the same adjuster index marks (4) align with the stopper pins (5) on both sides of the swingarm.
4. Turn the axle end bar to the lower edge of the swing arm.
5. Torque the rear axle nut to:
65 lbf·ft (88 N·m , 9.0 kgf·m)
If a torque wrench is not used for this installation, see your Honda dealer as soon as possible to verify proper assembly.
6. Recheck drive chain slack.



Lubrication

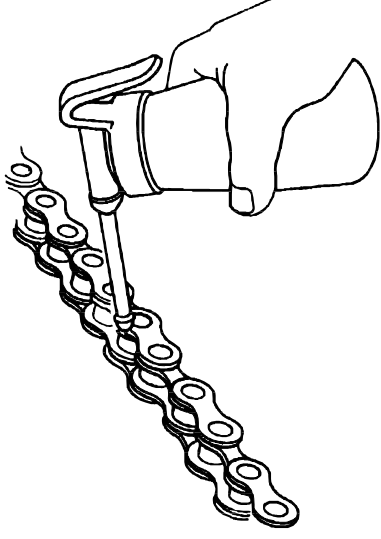

Lubricate every 300 miles (500 km) or sooner if chain appears dry.
The O-rings in this chain can be damaged by steam cleaning, high pressure washers, and certain solvents.

(cont'd)

