

ITEMS	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	→	REGULAR MAINT. INTERVAL				Refer to page
			INITIAL MAINT.	10	20	30	40	
			x100km x100mi MONTH	1.5	6	12	18	
		NOTE 2	1	6	12	18	24	
	BRAKE FLUID			I	I	I	I	27,29
	BRAKE PAD WEAR			I	I	I	I	82
	BRAKE SYSTEM		I	I	I	I	I	27-29
	BRAKE LIGHT SWITCH				I		I	91
*	HEADLIGHT AIM				I		I	-
	CLUTCH SYSTEM		I	I	I	I	I	30-31
	SIDE STAND				I		I	90
*	SUSPENSION				I		I	87,88
*	SPARK ARRESTER			C: every 1,600 km (1,000 mi) or every 100 operating hours				75
*	NUTS, BOLTS, FASTENERS		I		I		I	-
**	WHEEL/TIRES		I	I	I	I	I	38,89
**	STEERING HEAD BEARINGS		I		I		I	-

\* SHOULD BE SERVICED BY YOUR HONDA DEALER, UNLESS THE OWNER HAS THE PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR HONDA DEALER.

**NOTE:** 1. Service more frequently when ridden in wet or dusty conditions.  
2. Replace every 2 years. Replacement requires mechanical skill.