



## Rear Wheel Removal

1. Raise the rear wheel off the ground by placing a support block under the engine.
2. Loosen the rear axle nut (1) while holding the axle.

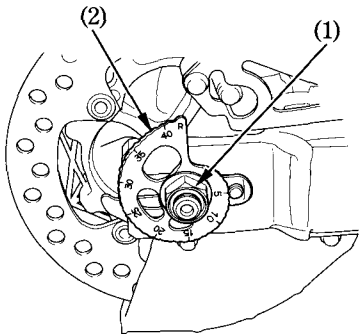

- (1) Rear axle nut  
(2) Adjusters

3. Turn both adjusters (2) so the rear wheel can be moved all the way forward for maximum drive chain slack.
4. Move the rear wheel forward. Derail the drive chain from the driven sprocket.
5. Move the rear axle (3) back all the way to the swingarm end. Pull down the rear axle.
6. Remove the rear wheel with the rear axle.

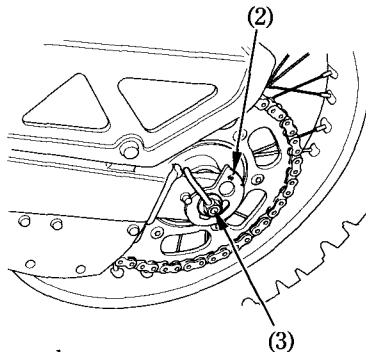

- (3) Rear axle