

REAR SUSPENSION

(Refer to the maintenance precautions on page 62).

Check the rear suspension periodically by careful visual examination. Note the following items:

1. Swingarm bearings should be checked by pushing hard against the side of the rear wheel. Free play indicates worn bearings.
2. Check all suspension component attachment points for security of their respective fasteners.
3. Check for oil leaks in the shock absorber units.

⚠ WARNING

- * **If any suspension components appear worn or damaged, consult your Honda dealer for further inspection. The suspension components are directly related to safety and your Honda dealer is qualified to determine whether or not replacement parts or repairs are needed.**