

Maintenance Schedule

Items		Frequency	Whichever Comes First ⇨	Initial Maint.	Regular Maint. Interval					Refer to page:	
					mi	100	600	1,200	1,800		2,400
					km	150	1,000	2,000	3,000		4,000
		Note	Month	1	6	12	18	24			
NON-EMISSION RELATED ITEMS		Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 month					99	
		Drive Chain Slider			I	I	I	I		100	
		Brake Shoe Wear			I	I	I	I		87	
		Brake System			I	I	I	I	I	84	
		Clutch System			I	I	I	I	I	71	
		Side Stand					I		I	98	
	*	Suspension					I		I	81	
	*	Spark Arrester				C: every 1,000 mi (1,600 km) or every 100 operating hours					79
	*	Nuts, Bolts, Fasteners			I		I		I	—	
	**	Wheels/Tires			I	I	I	I	I	89, 94	
	**	Steering Head Bearings			I		I		I	—	

* Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 144).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.