

Maintenance Schedule

Item	Break-in Maint.	Regular Maint.	Note:	Refer to page:
Drive Chain	I, L	***	Note 1	99
Drive Chain Slider	I	I		100
Brake Shoe Wear		I		87
Brake System	I	I		84
Clutch System	I	I		69
Side Stand		I		98
* Suspension		I		81
* Spark Arrester		****		79
* Nuts, Bolts, Fasteners	I	I		—
** Wheels/Tires	I	I		89, 94
** Steering Head Bearings	I	I		—

*** every 10 operating days, about 300 miles (500 km): I, L

**** 1,000 miles (1,600 km) or every 100 operating hours: C