

Engine Oil

8. Remove the old sealing washer (2) and install a new sealing washer on the drain bolt.
9. Install the oil drain bolt and tighten to the specified torque:
25 N·m (2.5 kgf·m , 18 lbf·ft)
10. Pour the recommended oil into the crankcase, approximately:
0.6 l (0.6 US qt , 0.5 Imp qt)
11. Install the oil filler cap/dipstick securely.
12. Start the engine. Let it idle 2-3 minutes, then turn it off.
13. With the motorcycle held upright on level ground, check the oil level.
If needed, add oil (page 60) until it reaches the upper level mark. (Do not overfill.)
14. Check for oil leaks.