



2. Remove the engine guard (3) by removing the four bolts (4).

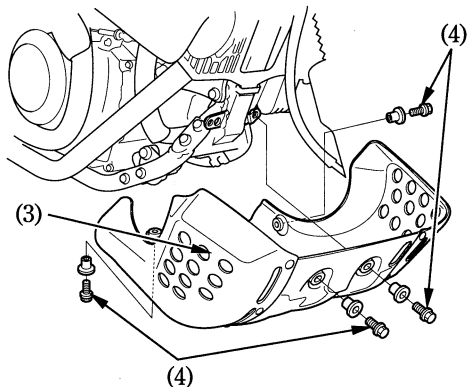

(3) Engine guard

(4) Bolts

3. Remove the oil filter (5) with a filter wrench and let the remaining oil drain out. Discard the oil filter (5).

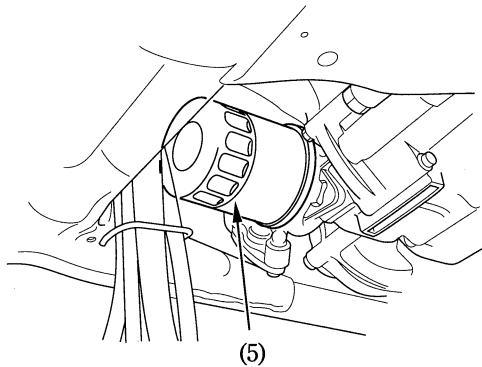

(5) Oil filter