


9. Clean any dirt from around the spark plug base.
10. Disconnect the spark plug cap and remove the spark plug with the spark plug wrench provided in the tool kit.
11. Visually inspect the spark plug electrodes for wear. The center electrode should have square edges and the side electrode should not be eroded.
Discard the spark plug if there is apparent wear or if the insulator is cracked or chipped.

12. Check the spark plug gap (9) using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (10) carefully.

The gap should be:

0.80 – 0.90 mm (0.031 – 0.035 in)

Make sure the plug washer is in good condition.

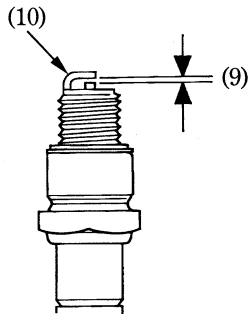

(9) Spark plug gap

(10) Side electrode