

## Using the switches

### Horn

The horn will sound when the main switch is in the "ON" position and the Horn switch is pressed.

