


Refueling

1. Open the key cover on the fuel tank. Insert the ignition switch key and turn clockwise to open the fuel tank cap.

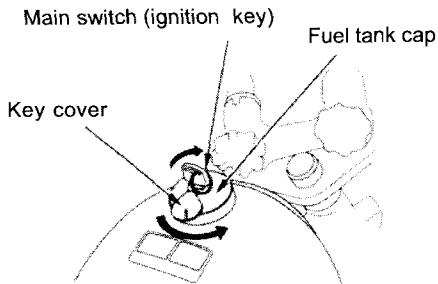

Refuelling

2. Fill the fuel to the bottom of the lower level plate.

If fuel is filled to a position over the bottom of the lower level plate, fuel will seep from the overflow breather opening on the fuel tank cap.

3. Hold the fuel tank cap down and remove the ignition key. If the gas tank cap does not close properly then the ignition key cannot be removed.

4. Close the key cover.

