

Daily inspections

Inspections must always be carried out once daily for safety before riding.

Detailed instructions are available in the “Easy maintenance” section for the underlined items. The following pages show important maintenance parts / location with diagrams. Also refer to the “Maintenance notebook” for inspection methods.

The following items must be inspected daily:

- Brake
 - Lever play
 - Pedal play
 - Brake performance
 - Brake fluid level
 - Tires
 - Air pressure
 - Cracks, damages
 - Excessive wear
 - Tread depth (*)
 - Engine
 - Engine oil level (*)
 - Starting up, irregular noise(*)
 - Slowing, accelerating operation (*)
 - Lighting devices and indicating lamps
 - Any faults detected from previous day
- Items with (*) mark should be carried out depending on the mileage of the motorcycle or the state of the ride quality.