

Brakes

Front Brake

<Inspecting lever play>

Pull in the front brake lever until resistance can be felt. Measure the play and confirm that the play is within the specified range by using a scale

Front brake lever play: 10-20 mm

Adjust the play if it is outside the specified range. Place the handle bars so that the motorcycle would travel forward in a straight line. Adjust by tightening (or loosening) the brake arm adjuster.

*Adjustments should be carried out by half turns on the adjuster.

