

Tire pressure will gradually decrease. It is also very difficult to judge whether a tire is losing air pressure depending on the type of tire used by sight alone. Therefore tire pressure should be checked at least once monthly.

Always check tire pressure when tires are cold as the air pressure will increase inside the tires when they are hot after the motorcycle has been used.

Tire air pressure

Front wheel	100kPa (1.00 kgf/cm ²)
Rear wheel	125kPa (1.25 kgf/cm ²)

< Tire damage >

Check the tires daily before riding for any signs of damage from nails, stones, ruptures, cracking etc. Also check the tires for any signs of damage after riding on rough surfaces such as road curbing or over potholes etc.

