


Outside temperature and oil viscosity

Base the correct engine oil for your motorcycle on the temperature / viscosity chart as shown below.

(SAE Standard)

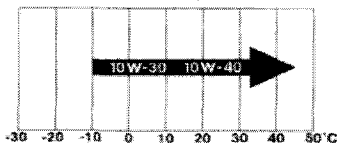

(Outside temp.)

Replacement timing:

1st replacement: After the first 1000km or 1 month

Normal replacement: Every 3000km or once yearly.

See your AUTHORISED HONDA dealer for oil replacement.