

Easy maintenance

Refilling engine oil

1. Idle the engine for 3~5 minutes on a flat surface.
2. Stop the engine and remove the oil level gauge after 2~3 minutes.
3. Wipe off any oil on the level gauge.
4. Stand the motorcycle upright and refill engine oil until the oil level reaches the upper limit on the oil level gauge.

Make sure that no foreign particles can enter the oil filler port and also clean up any oil spillage correctly with a cloth.

5. Firmly replace the oil filler cap.

NOTICE

If the engine oil is below or above the specified level, it will have an adverse effect on the engine.

