


Engine servicing

Engine Removal/Installation Illustration

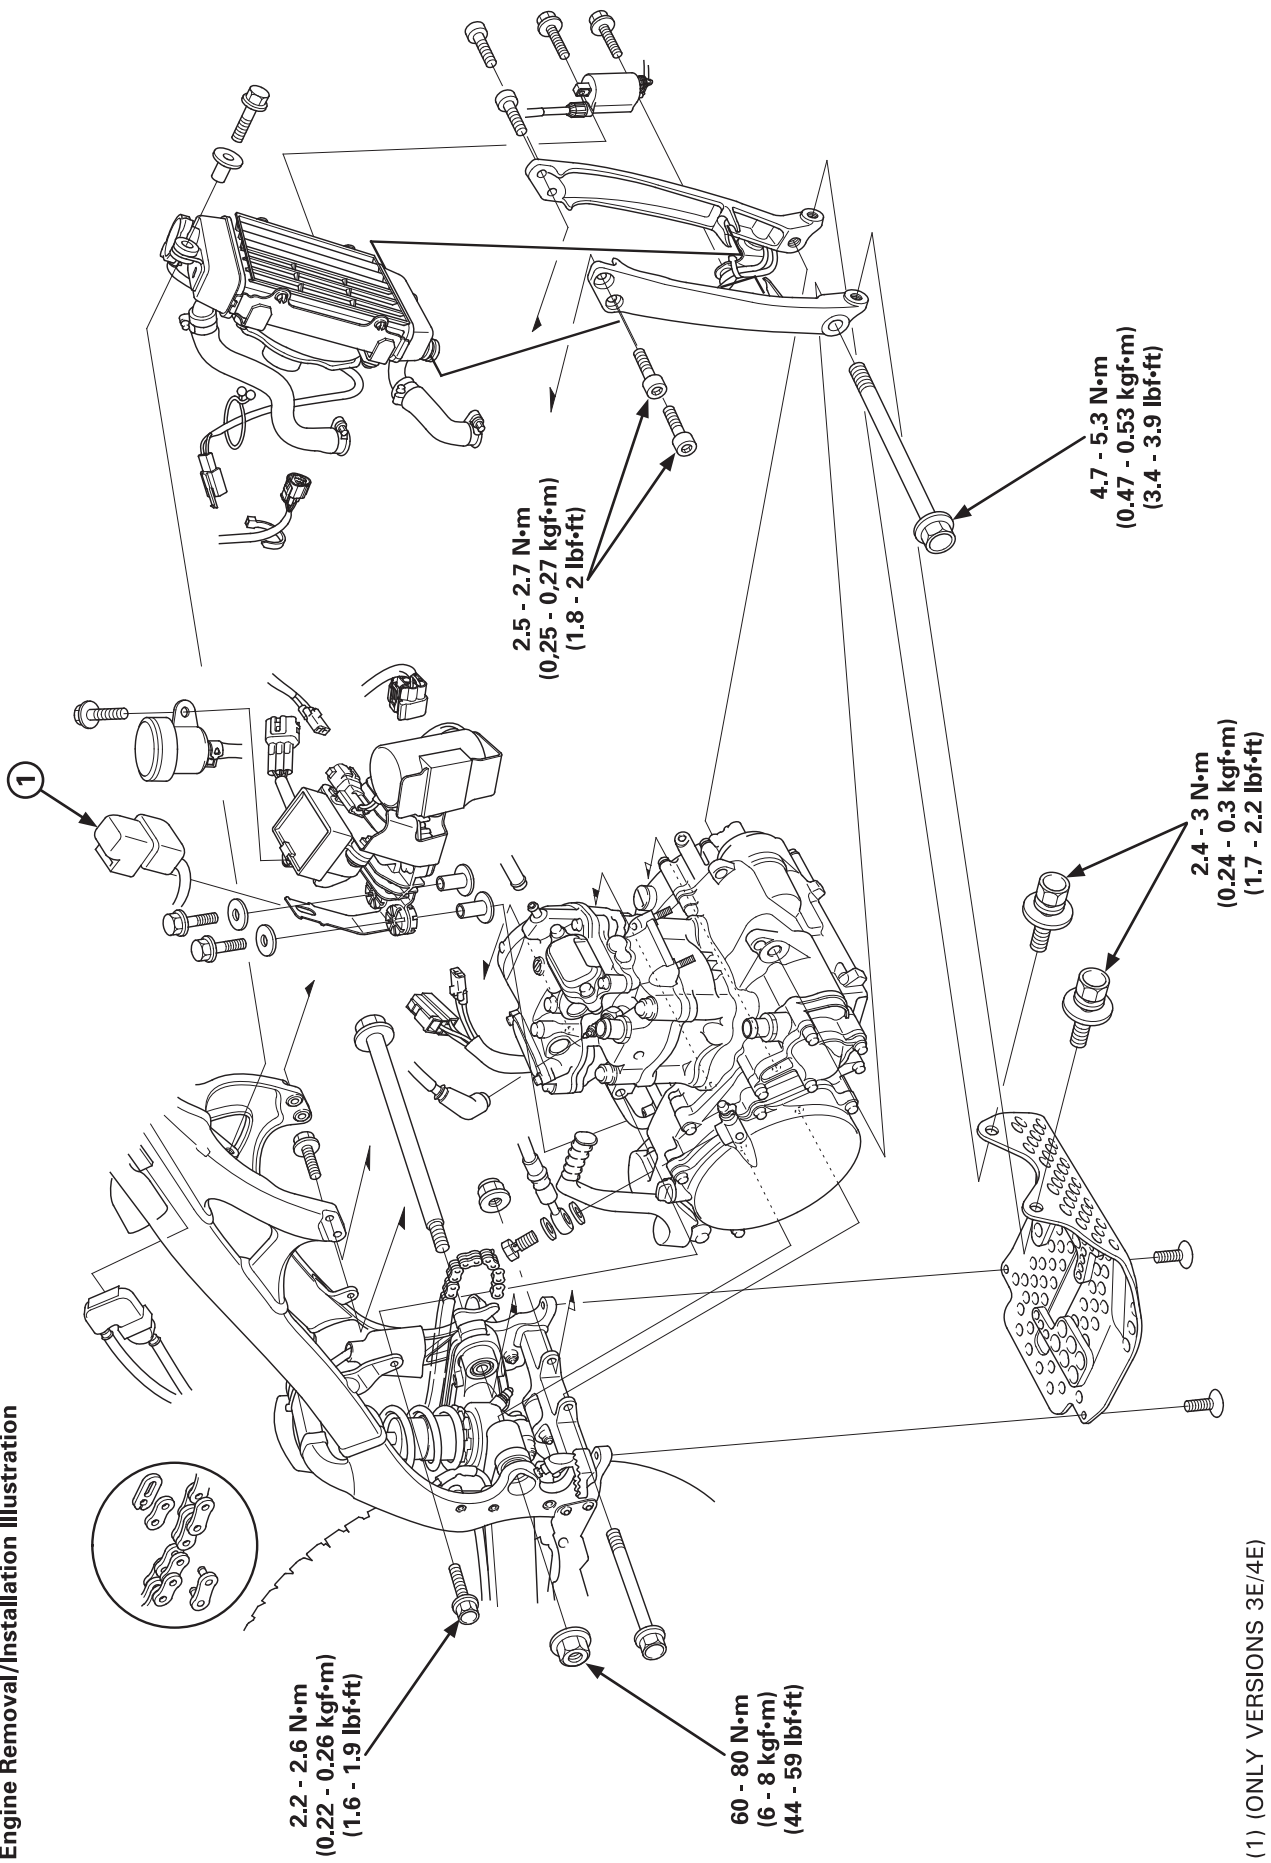

(1) (ONLY VERSIONS 3E/4E)