


(1) VALVE SPRING COMPRESSOR  
(2) ATTACHMENT

Compress the valve springs with the special tools and install the cotters.  
Grease the cotters to ease installation.

**Tools:**


**Valve spring compressor**      07757-0010000  
**Compressor attachment**      07959-KM30101

To prevent loss of tension, do not compress the valve springs more than necessary.

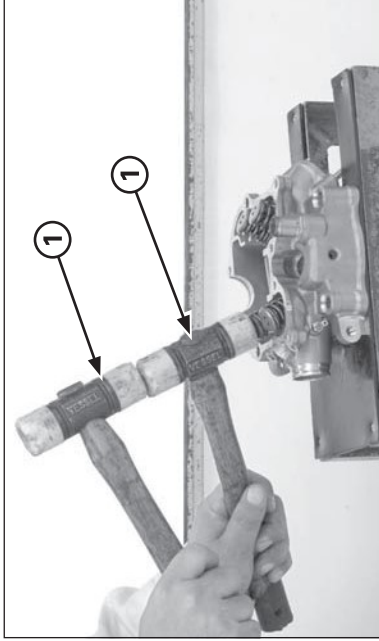

(1) PLASTIC HAMMERS

Tap the valve stems gently with two plastic hammers as shown to seat the cotters firmly.  
Support the cylinder head so the valve heads do not contact anything that may damage them.

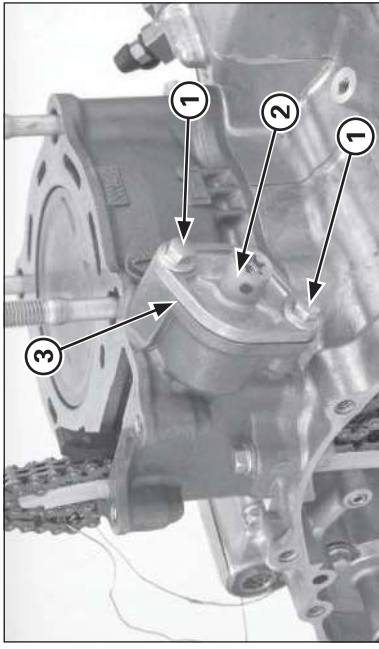

(1) BOLTS  
(2) CAM CHAIN TENSIONER LIFTER  
(3) GASKET

**Cylinder/Piston**

**Cylinder Removal**

Remove the cylinder head (page 4-20).

Remove the bolts, cam chain tensioner lifter and gasket.