
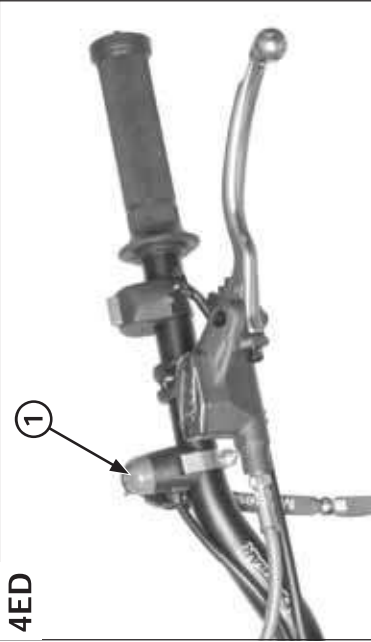


## Operating instructions

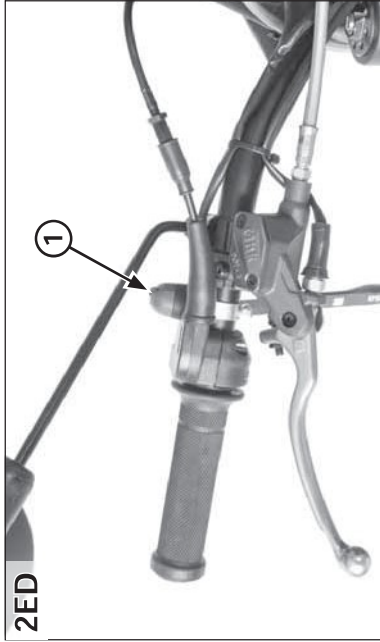


(1) MAGNETIC STOP SWITCH

When you shift the transmission into gear, apply front brake to prevent the motorcycle move forward.

### Magnetic Stop Switch

1. Shift the transmission into neutral.
2. Pull the stop magnetic switch (red) until the engine stops completely.

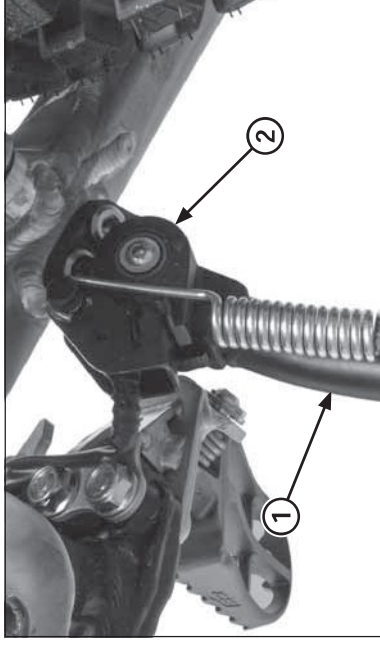

(1) SIDE STAND  
(2) SIDE STAND STOP SWITCH

### Side Stand

The side stand is used to support your Cota while parked. To operate, use your foot to lower the side stand until it is fully extended.

Before riding, raise the side stand.

## NOTICE

*COTA can be equipped with a switch on the side stand (depending on frame number).*

*The engine should stop as you lower the side stand.*

### Break-In Procedure

#### New Motorcycle

Following proper break-in procedure helps ensure that the most important and expensive components on your new motorcycle will provide maximum performance and service life. (Also follow proper break-in procedure for a newly rebuilt engine.)

When riding a new motorcycle, operate the motorcycle for the first 20 minutes using not more than half throttle and shifting gears so that the engine does not lug:

#### Reconditioned Motorcycle

- After replacing the cylinder and crankshaft, operate the motorcycle 20 minutes observing the same cautions as for a new motorcycle.
- When the piston, piston ring, gears, etc. are replaced, they must be broken in observing the first 30 minutes using not more than half throttle and shifting gears so that the engine does not lug