


## Ignition switch

Switches the electrical system on/off, locks the steering.

► Key can be removed when in the

○ (Off) or  (LOCK) position.

