

- 1 Place the scooter on its centre stand.
- 2 Lock the rear wheel by squeezing the rear brake lever and setting the rear brake lock lever.
  - ▶ The stater motor will only work when the brake lever is squeezed and the side stand is up.

