


## Front Cover

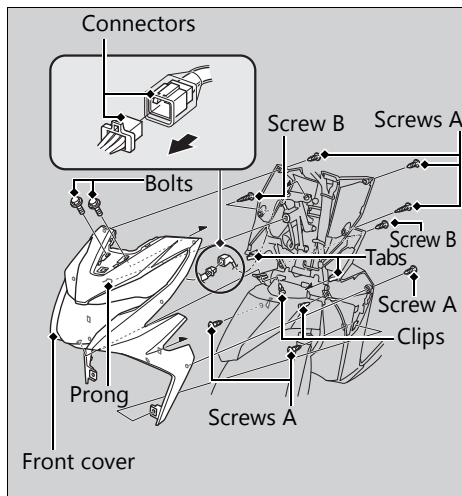

### Removal

1. Remove the front top cover. ► P. 60
2. Remove the bolts and the clips.
3. Remove the screws A and the screws B.
4. Remove the front cover by releasing the tabs and the prong then disconnect the connectors.

### Installation

Install the parts in the reverse order of removal.