


Brakelight/Taillight Bulb

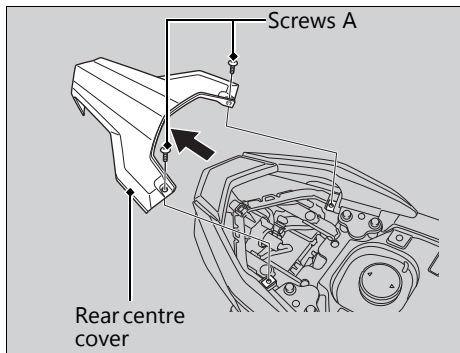

1. Open seat. ► P. 36
2. Remove the rear centre cover by removing the screws A.

3. Remove the screws B.
4. Remove the brakelight/taillight lens by releasing the tab from the slot.
5. Slightly press the bulb and turn it counterclockwise.
6. Install a new bulb and parts in the reverse order of removal.

