


■ Rear Turn Signal Bulb

The right and left turn signal bulbs replacement can be done in the same way.

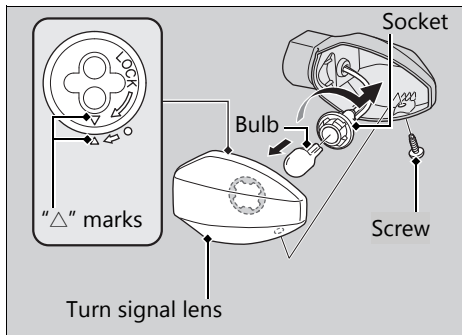

1. Remove the turn signal lens by removing the screw.
2. Turn the socket counterclockwise and pull it out.
3. Pull out the bulb without turning it.
4. Install a new bulb and parts in the reverse order of removal.

Install the socket by turning it clockwise.

- Make sure that the "△" marks on the socket and turn signal housing are aligned.
- Use only the amber bulb.