

1 Date setting:

1 Turn the ignition switch to the **I** (On) position.

2 Press and hold the **SEL** button and **SET** button, the year digits start flashing.

3 Press the **SEL** button until the desired year is displayed.

► Press and hold the **SEL** button to advance the year fast.



4 Press the **SET** button. The month digits start flashing.



5 Press the **SEL** button until the desired month is displayed.

► Press and hold the **SEL** button to advance the month fast.



6 Press the **SET** button. The day digits start flashing.



7 Press the **SEL** button until the desired day is displayed.

► Press and hold the **SEL** button to advance the day fast.



8 Press the **SET** button. The date is set, and the display moves to the clock setting.