

## HOW TO USE THIS MANUAL

Sections 1 through 3 apply to the whole motorcycle, while sections 4 through 17 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration and all the required specifications, torque values, general instructions, tools and troubleshooting for the section. The subsequent pages give detailed procedures.

If you don't know the source of the trouble, see section 18, Troubleshooting.

All information, illustrations, directions and specifications included in this publication are based on the latest product information available at the time of approval for printing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation whatever.

No part of this publication may be reproduced without written permission.

HONDA MOTOR CO., LTD.  
SERVICE PUBLICATIONS OFFICE

## CONTENTS

	<b>GENERAL INFORMATION</b>	<b>1</b>
	<b>LUBRICATION</b>	<b>2</b>
	<b>MAINTENANCE</b>	<b>3</b>
<b>ENGINE</b>	<b>FUEL SYSTEM</b>	<b>4</b>
	<b>ENGINE REMOVAL/INSTALLATION</b>	<b>5</b>
	<b>CYLINDER HEAD/VALVES</b>	<b>6</b>
	<b>CYLINDER/PISTON</b>	<b>7</b>
	<b>CLUTCH/OIL PUMP/GEARSHIFT LINKAGE</b>	<b>8</b>
	<b>RECOIL STARTER/ALTERNATOR/STARTER CLUTCH</b>	<b>9</b>
	<b>TRANSMISSION/CRANKSHAFT</b>	<b>10</b>
	<b>CHASSIS</b>	<b>FRONT WHEEL/SUSPENSION/BRAKE/STEERING</b>
<b>REAR WHEEL/BRAKE/DRIVE MECHANISM</b>		<b>12</b>
<b>REAR FENDER/EXHAUST PIPE</b>		<b>13</b>
<b>ELECTRICAL</b>	<b>IGNITION SYSTEM</b>	<b>14</b>
	<b>BATTERY/CHARGING SYSTEM</b>	<b>15</b>
	<b>STARTER MOTOR</b>	<b>16</b>
	<b>LIGHTS/SWITCHES</b>	<b>17</b>
	<b>TROUBLESHOOTING</b>	<b>18</b>