


MAINTENANCE

AIR CLEANER

Remove the seat by pulling the seat lever.
Loosen the four wing bolts attaching the air cleaner case cover.
Remove the air cleaner case cover.


AIR CLEANER CASE COVER

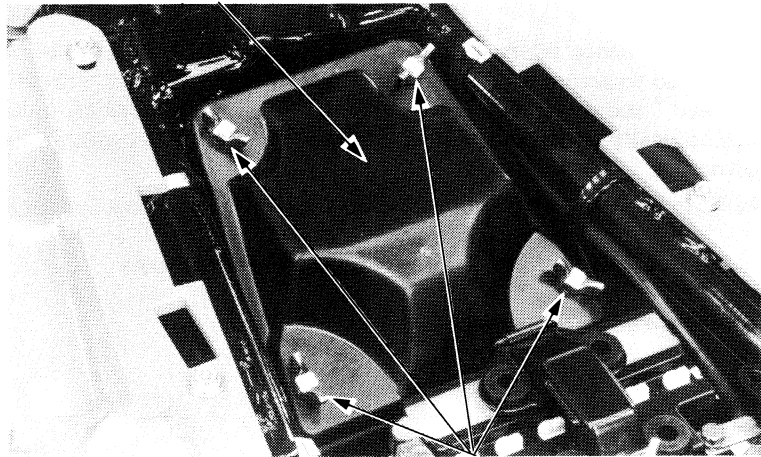

WING BOLTS

Remove the air cleaner element assembly from the air cleaner case.
Remove the bracket from the element holder.
Remove the air cleaner element from the element holder.

AIR CLEANER ELEMENT TUBE BAND

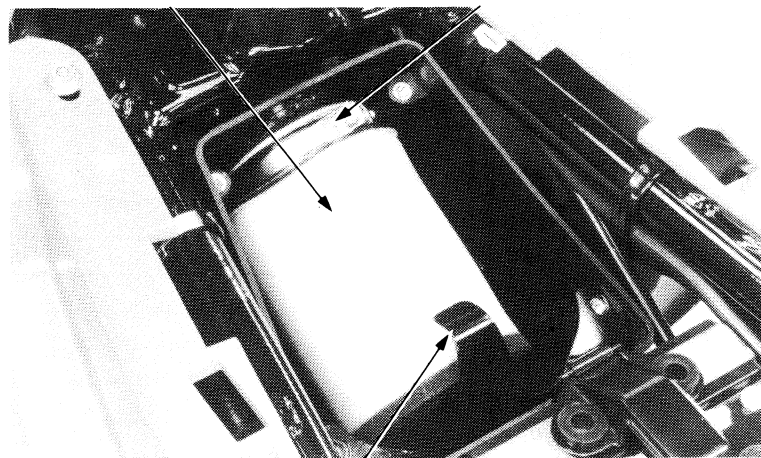

BRACKET

Wash the element in non-flammable or high flash point solvent, squeeze out the solvent thoroughly, and allow to dry.

Soak the element in gear oil (SAE 80–90) and squeeze out excess.
Place the element onto the element holder.

Install the bracket onto the element holder.
Install the element assembly into the air cleaner case.

Install the air cleaner case cover by using four wing bolts.
Install the seat.

