


## MAINTENANCE

Inspect the intake and exhaust valve clearances by inserting the feeler gauge between the adjusting screw and valve stem.

### VALVE CLEARANCES:

Intake: 0.05 mm (0.002 in)  
Exhaust: 0.05 mm (0.002 in)

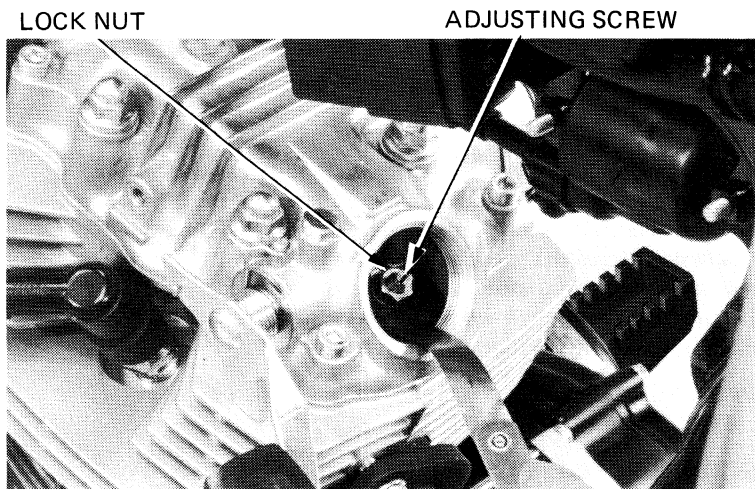

Adjust by loosening the lock nut and turning the adjusting screw until there is a slight drag on the feeler gauge.

Hold the adjusting screw and tighten the lock nut.


**TORQUE: 15–18 N·m**  
(1.5–1.8 kg·m, 11–13 ft·lb)

Recheck the valve clearance and install the valve adjuster covers.

**TORQUE: 10–14 N·m**  
(1.0–1.4 kg·m, 7–10 ft·lb)

Install the timing hole cap.

VALVE ADJUSTING WRENCH, 10 x 12 mm  
07708–0030200

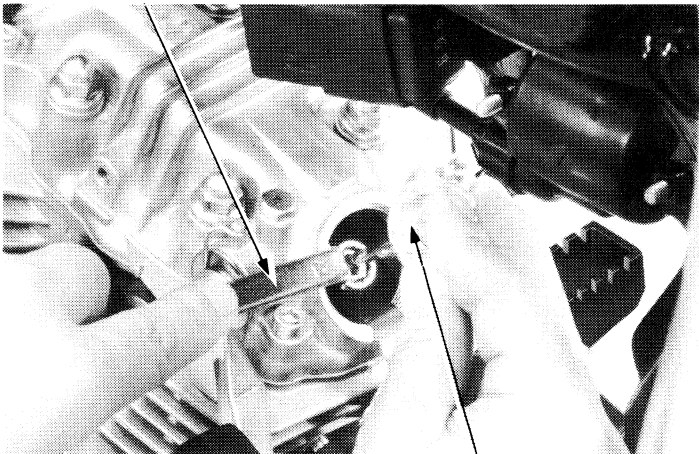

VALVE ADJUSTER A  
07708–0030300

## FUEL FILTER

Disconnect the fuel tube and drain fuel from the fuel tank.

### WARNING

*Keep gasoline away from flames or sparks.  
Wipe up spilled gasoline at once.*

Remove the fuel valve by loosening the valve nut.

Remove the fuel filter and wash it in clean non-flammable or high flash point solvent.

Install the filter and valve and attach the fuel line.

Fill the fuel tank and turn the fuel valve "ON" and check for leaks.

