


MAINTENANCE

Inspect the sprocket teeth for excessive wear or damage. Replace if necessary.

NOTE

Never install a new drive chain on worn sprockets or a worn chain on new sprockets. Both chain and sprockets must be in good condition, or the new replacement chain or sprockets will wear rapidly.


To remove the drive sprocket, remove the left crankcase cover.

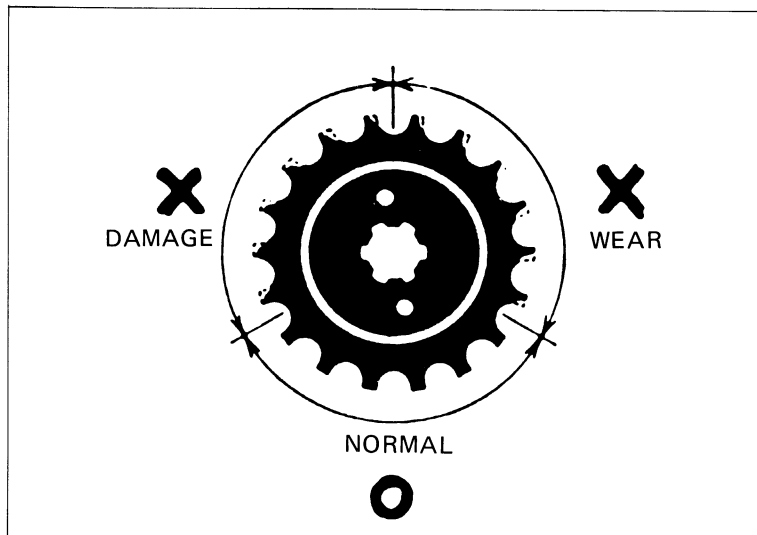

Install the drive chain in the reverse order of removal noting the chain clip direction.

CAUTION

- Do not assemble the drive chain without the four O-rings.
- Be sure that there is no space between the master link and chain retaining clip.

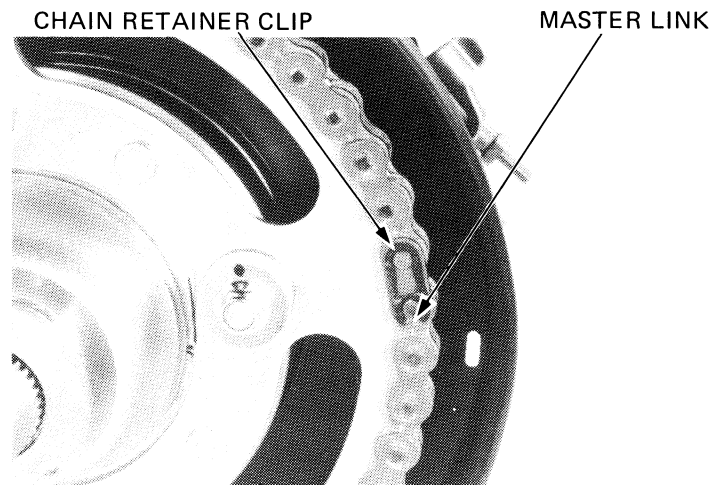

BATTERY

Remove the seat by pulling the seat lever. Inspect the battery fluid level.

When the fluid level nears the lower level, remove the battery holder by loosening the wing bolt and refill with distilled water to the upper level.

NOTE

Add only distilled water. Tap water will shorten the service life of the battery.

