

MAINTENANCE

SPARK ARRESTER CLEANING

WARNING

- *The exhaust system becomes very HOT even after short periods of engine operation.*
- *Perform this operation in a well-ventilated area, free from fire hazard.*
- *Use adequate eye protection.*



Remove the spark arrester bolt(s).

On '84 models, remove the spark arrester.

Start the engine and remove accumulated carbon from the exhaust system by momentarily revving up the engine several times. Stop the engine.

On '84 models, remove any accumulated carbon from the spark arrester and then install it in the muffler.

Install and tighten the spark arrester bolt(s) securely.

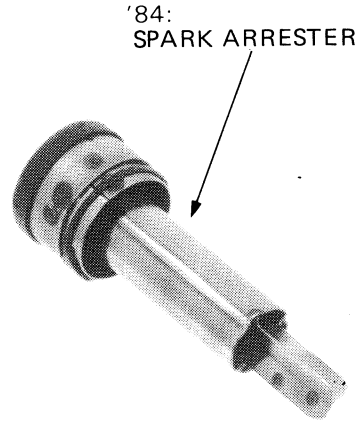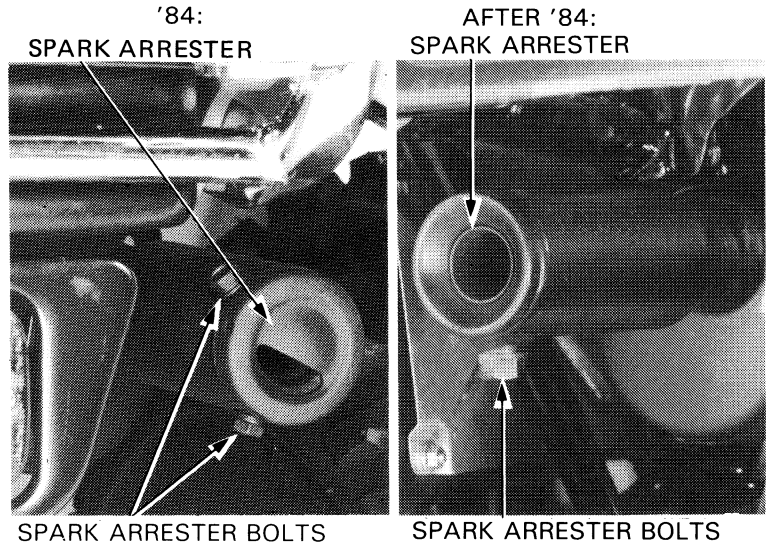

NUTS, BOLTS, FASTENERS

Tighten bolts, nuts and fasteners at regular intervals shown in the Maintenance Schedule (Page 3-3).

Check that all chassis nuts and bolts are tightened to their correct torque values (Page 1-5). Check that all cotter pins and safety clips are in place.

LIGHTING EQUIPMENT

Apply the parking brake lever.
Start the engine.

Check the headlight and taillight by operating the lighting switch.

Position	Function
OFF	Headlights are OFF.
LO	Headlight low beam and taillight should be ON.
HI	Headlight high beam and taillight should be ON.

If the lights do not work properly, check the bulbs and refer to page 17-6 to test the switch if necessary.

LIGHTING SWITCH

