

FUEL TANK

Remove the seat.

Turn the fuel valve OFF, and disconnect the fuel line. Remove the fuel tank.

WARNING

*Keep gasoline away from flames or sparks.
Wipe up spilled gasoline at once.*

Use a drain pan and check that fuel flows freely out of the fuel valve. If flow is restricted, clean the fuel filter (Page 3–6).

Install the fuel tank and connect the fuel tube.
Install the seat.

NOTE

- Be sure the front fuel tank brackets are on the rubber cushions.
- After assembly, make sure there are no fuel leaks.
- Do not overtighten the fuel valve lock nut.

