



Remove the three bolts attaching the seal cover to the drive chain cover and the seal cover.  
Remove the drive chain cover clips and two bolts and remove the drive chain cover.  
Loosen the rear wheel bearing holder attaching bolts and drive chain adjusting nut.

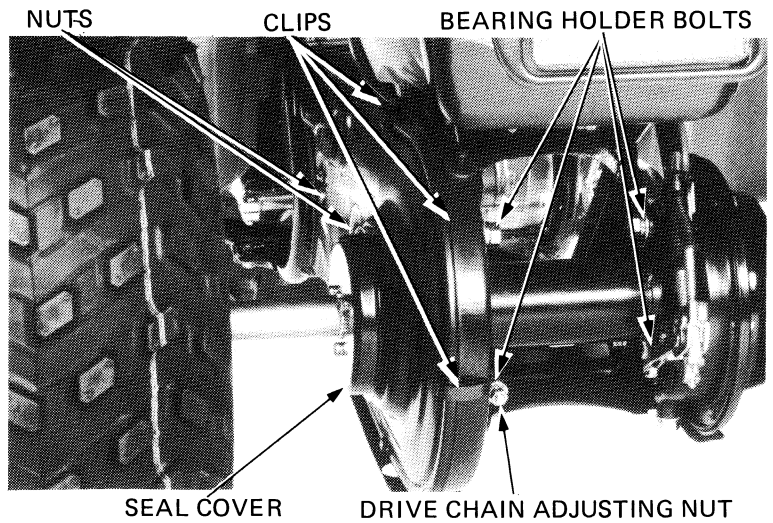

Remove the drive chain master link clip, master link and drive chain.

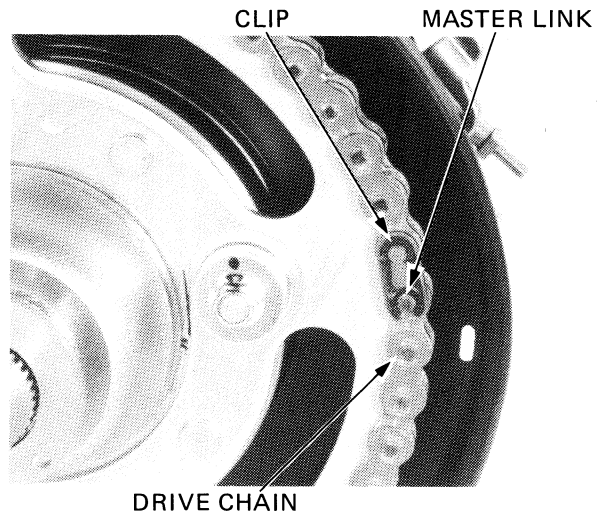

Remove the upper engine hanger bolt.

