


Install the pulse generator.  
Turn the crankshaft counterclockwise and align the "F" mark with the crankcase cover index mark.

Align the pulse rotor and pulse generator index marks.  
Adjust the pulse rotor and generator air gap to 0.40–0.65 mm (0.015–0.025 in).

Install the pulse generator cover.  
Pour fresh oil into the oil pockets in the cylinder head so that the cam lobes are submerged.

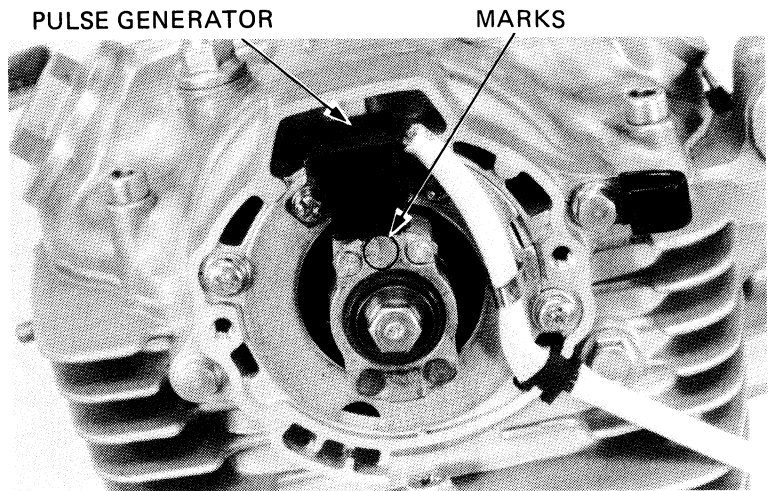

Do the following after installing the pulse generator cover.

- Adjust valve clearance (Page 3–5).
- Adjust cam chain tension (Page 3–7).
- Inspect ignition timing (Page 3–8).
- Test cylinder compression (Page 3–9).