



RECOIL STARTER/ALTERNATOR/STARTER CLUTCH

Apply grease to the ratchet and install the ratchet onto the drive pulley.
Install the spring, spring seat and ratchet guide.

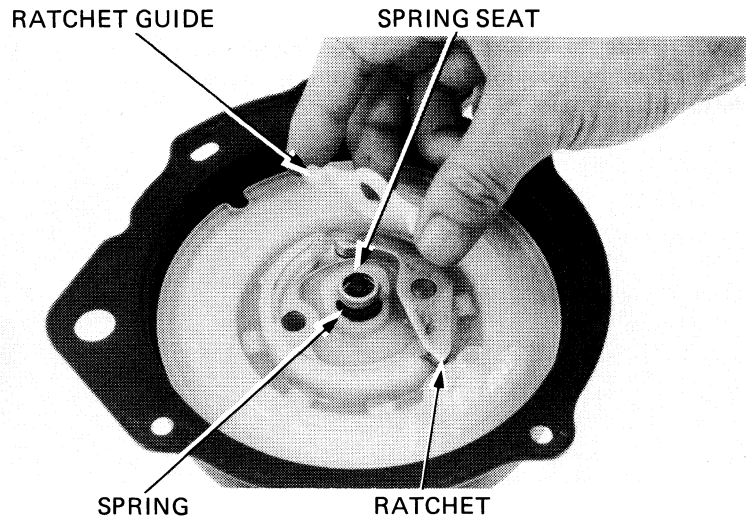

Install the ratchet cover and tighten the nut.

Check recoil starter operation by pulling the starter grip.

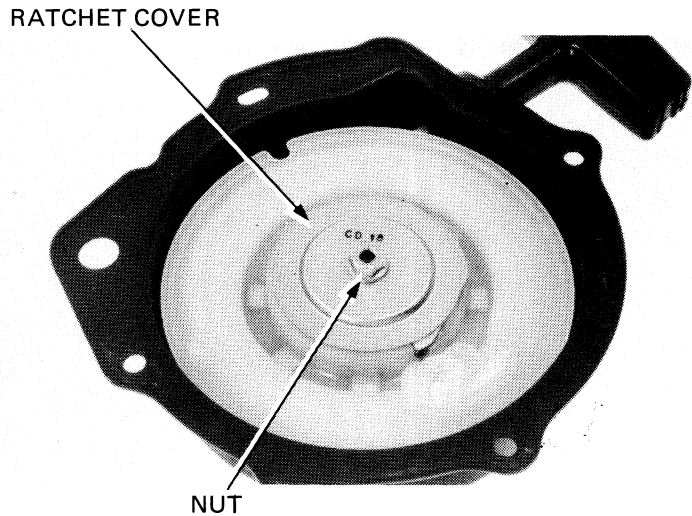

INSTALLATION

Install the starter gasket and recoil starter with four bolts.

Install the neutral indicator and secure it with the E-clip.

Install the gearshift pedal.

Fill the crankcase with the recommended oil (Page 2-2).

