


**TIMING SPROCKET  
INSTALLATION**


Install the sprocket, aligning any tooth center with the keyway center in the crankshaft.

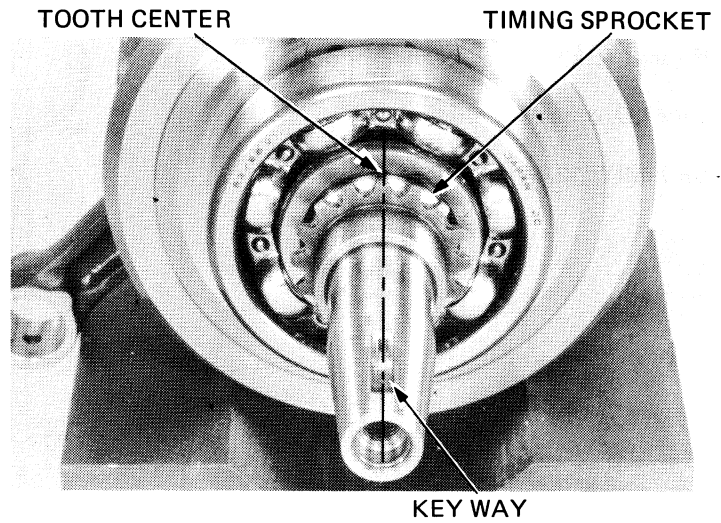

**TRANSMISSION DISASSEMBLY**

Remove the shift fork shaft and remove the shift forks.

Remove the shift drum.

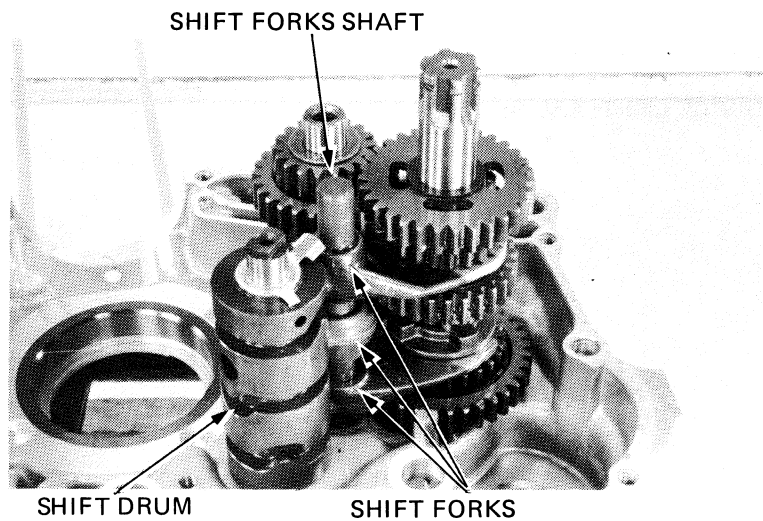

Remove the mainshaft and countershaft.  
Disassemble the mainshaft and countershaft.

